CRYSTAL

INSTRUCTION MANUAL

Safety information

Before use please read carefully and use in accordance with these safety instructions

Before commencing any electrical work ensure the supply is switched OFF at the mains, either by switching off the consumer unit or by removing the appropriate fuse.

This product should be installed in accordance with th relevant sections of the building regulations code and in accordance with the latest edition of IEE regulations

If the unit is to be used as a replacement for an existing product, remove the existing unit from its location and disconnect the wiring. Connect the wires as shown in diagrams..


Ensure terminals are properly tightened and ensure no bare wires are visible. When pushing back into the backbox ensure no wires are trapped.

Read the instructions carefully before starting the installation process and keep them safe for future

SWITCHES MUST BE INSTALLED BY A **QUALIFIED ELECTRICIAN**

SWITCHES MUST BE INSTALLED BY A QUALIFIED **ELECTRICIAN**

Whats in the box

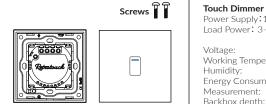

Glass front

Capacitors included (DIMMER ONLY)

Note: Touch Switches fit in 35mm depth backbox

Specification

WARNING: Do not exceed the load rating 1 IMPORTANT NOTICE: as shown on the back of the product

Installation

lift to un-clip.

Before commencing any electrical

work, ensure the supply is switched

OFF at the mains, either by switching

Lift & twist

to remove

Touch 1-3G 1W

Power Supply: 100-240V AC 50/60HZ Load Power: 3-300W

off the consumer unit or by removing Power Supply: 100-240V AC 50/60HZ Load Power: 3-800W/G (2000W Max) the appropriate fuse.

Touch Dimmer

Touch 1-3G 2W

Power Supply: 100-240V AC 50/60HZ 2 The glass panel: Load Power: 3-200W (10 lamps Max)

Dependent on model the glass panel 110~240V ~ 50/60Hz Working Temperature: OoC~40oC Relative may come attached. If so, using a flat 10% - 93% wide screwdriver, align the aperture

Energy Consumption: <0.02W 86x86x35mm on the switch's bottom and twist and

100,000 touches

Caution: Hold glass Note: Our dimmer switches are not suitable for use with fluorescent loads, including energy saving lamps and certain non dimming LED bulbs.

*Not all LED bulbs are compatible and depends on brand, please call for more information.

3 Wiring:

are visible.

Wire as described in the diagrams shown overleaf as per your model. to click into place. Ensure terminals are correctly tightened and ensure no bare wires

Check correct wires are connected to the correct terminals. If incorrectly wired, this could damage the switch

N = Neutral Terminal L = Live Terminal

L1, L2, L3 = Load Terminal

Then push back into the backbox, ensure no wires are trapped, then screw switch to the backbox.

4 Attach the glass Surround: Align the glass panel over the switch (A) and firmly push (B)

4 Power on & set:

Ensure the glass is attached before turning the power is on, wait 2 minutes for the switch to power up and set, then touch the panel to activate.

IF IN ANY DOUBT, CONTACT A QUALIFIED ELECTRICIAN.

Using the Switch

Touch Switch

On/Off models simply touch the rectangles, and the switch will cycle the light circuit on/off.



ON/OFF SWITCH



Curtain Switch

Dimmer Switch

Touch button to turn lights on to the last used brightness level. Touch again to turn off.

Touch and hold the button to dim up and dim down, release when the light reaches desired brightness

Curtain / Blind Switch

Touch the middle button to open or close the curtail/Blind. Touch and hold the buttons on either side to adjust, open and close.

FAQ'S

Q: The light switch works when the front panel of glass is off, but when I put the front glass panel back on, it doesn't work.

A: You must ensure you have the front glass panel on the switch whilst the main power is off.

the mains power back on and leave

This allows the switch to reset the

proximity and will now work.

for a further 2 minutes.

Turn the mains power off for 30 seconds, and then put the front panel of glass onto the switch, turn

> **A:** You will not have to use any correctly as they carry Live link

A: Ensure you have paired the switches after wiring them; follow

Q: I have wired the switches, and


the 1 way is working, but the 2 way

the process overleaf in the 2 way section to configure 2 way wiring.


switch isn't?

Q: Do I need additional wiring on a 2 way or intermediate circuit?

additional wiring that isn't on the diagram, it is IMPORTANT that you ensure the link terminals are wired

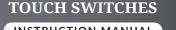


2 Way / Intermediate Wiring

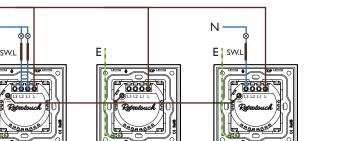

You will need to pair the gangs; Press and hold a gang on the master wired switch for 5 seconds until the LED light flashes. Within 60 seconds, press the If required, capacitors corresponding gang on the secondary switch you want to pair with the master switch - the switch will flash or beep to confirm the pairing is successful.

Repeat the process for all gangs you want to pair.

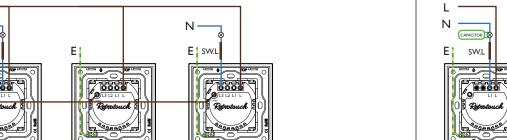


Capacitor

are included & used to eliminate flickering of dimmable LED lamps. Install across the first




Dimmer Wiring

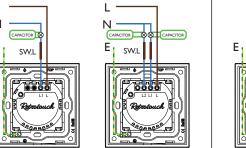

lamp from the switch.



Curtain / Blind Wiring 2 Year Guarantee

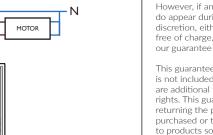

defects due to:

Designed for electric curtains or blinds with motors.

Factory reset:

Press and hold the touch button area for 10 seconds and the switch will reset back to factory settings.

This switch is of excellent quality and construction. However, if any defects in materials or workmanship Contact support@retrotouch.co,uk for help. do appear during the guarantee period, we will, at our discretion, either repair or replace the defective parts free of charge, subject to the terms and conditions of This guarantee does not cover any other claims our guarantee shown below.

This guarantee covers both parts and labour. Carriage is not included. This guarantee provides benefits which are additional to, and do not affect, your statutory rights. This guarantee does not cover the cost of returning the product to the dealer from whom it was product this will not extend the guarantee. purchased or to ourselves. This guarantee applies only to products sold and located in mainland Great Britain It does not cover liability in respect of or replacemen of plugs, cables or fuses and also does not cover

 Failure to use or maintain product in accordance with Retrotouch instructions

- Accidental damage to or abuse or misuse of the
- Product modification, except by Retrotouch or approved agent.
- Dismantling of or interference with the product. Before returning any product under this Guarantee please check that:
- You have followed the product instructions correctly

If you wish to claim under this guarantee you should:

Give exact details of the nature of the defect.

and scan this whatsoever, including, without limitation, any liability QR code... for incidental, indirect or consequential damage, nor does it cover any claims for conversion or modification or for the costs of repair carried out by any third party without the prior consent of OR visit Retrotouch. If replacement parts are fitted to the

Retrotouch switches marked with the CE mark Want integrated audio in your project? comply with the EC Low Voltage Directive: 73/23/EEC, Electromagnetic Compatibility Directive 89/336/EEC They also comply with BS EN 60669 2-1 & BS EN 55015

Need Help?

Open your

phone's camera

QR code...

support.retrotouch.co.uk

Visit our website for videos and how too guides or contact our support team at support@retrotouch.co.uk

Register your product

products and get dedicated suppor

Visit our sister company Lithe Audio for award winning all-in-one ceiling, wall and garden speakers: www.litheaudio.com

and scan th

www.retrotouch.co.uk/register

news and offers.

Get Social and Win

Follow us on Instagram, Facebook or Twitter and post a photo or video of your Retrotouch install.

Tag us in and use #myretroswitch for a chance to win a Retrotouch or Lithe Audio product selection!







+44 (0) 1293 279 426 SALES@RETROTOUCH.CO.UK

Retrotouch







DESIGNED IN UK. ASSEMBLED IN P.R.C.